

COVERSHEET

Planned document changes:

Breifly:

No planned changes.

Document changes:

Date:

Change:

Rev.

after change:

2022-03-18


New instruction.

-

EC219 ECHF - T620V Top part

POS	DESCRIPTION	PART	QTY	COMMENTS
1	Top part Atlas T620V EC219W	1027811	1	
2	Spacer terminal 28mm	1030616	4	
3	Hose terminal ECHF special	1041878	2	
4	MC6S M16x140 12.9 ZFSL	6000152	4	
11	Hose terminal ECHF 1/4+3/8	1042960	2	For ss9
16	Screw Cover M16	611302	8	

POS in order of assembly

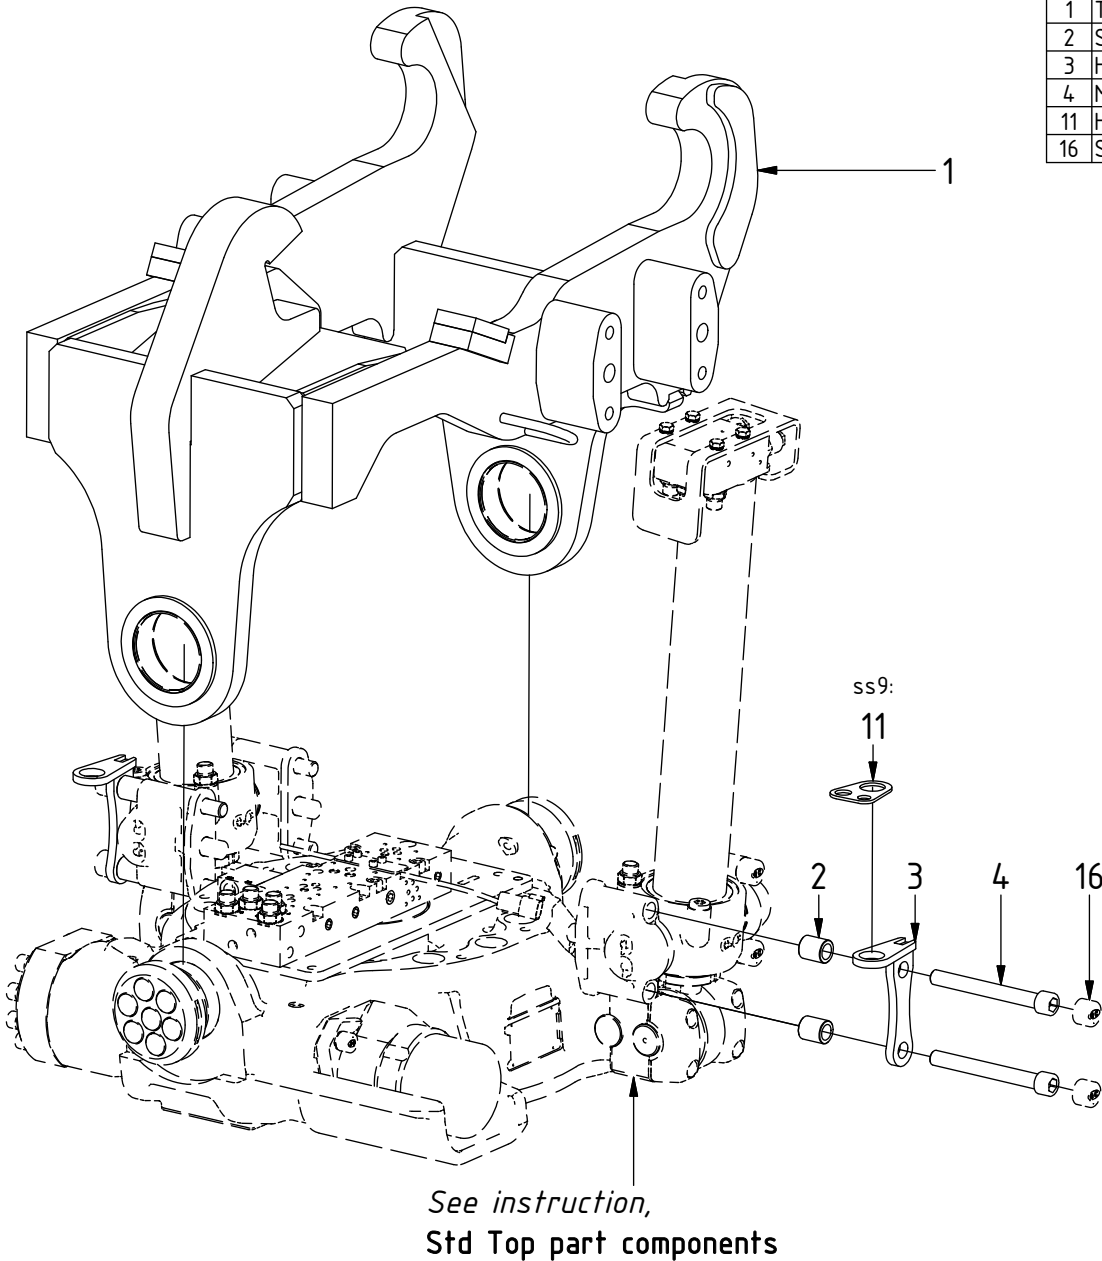

EC219 ECHF - T620V Top part


- P = 5, 6
- T = 5, 6
- R = 12

FEED
3/4" (Std)


ss10



ss9IQ

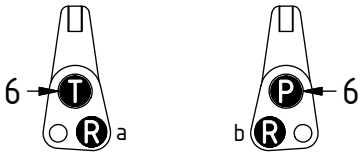

POS	DESCRIPTION	PART	QTY	COMMENTS
5	Use washer, adapter, nut: POS.7, 8, 10			
6	Use washer, adapter, nut: POS.7, 9, 10			
7	Washer NL 1"	611095	2	
8	Adapter 1260-12-12 (3/4")	712210	2	
9	Adapter 1260-12-57 (3/4")	712227	2	
10	Counternut 1270-12 (3/4")	712211	2	
12	Use washer, adapter, nut: POS.13, 14, 15			
13	Washer NL 16mm	611044	2	
14	Adapter 1260-06-32 (3/8")	710242	3	
15	Counternut 1270-06 (3/8")	710252	2	
	Attach feed hoses from control system			(a & b represents channels on feed block)

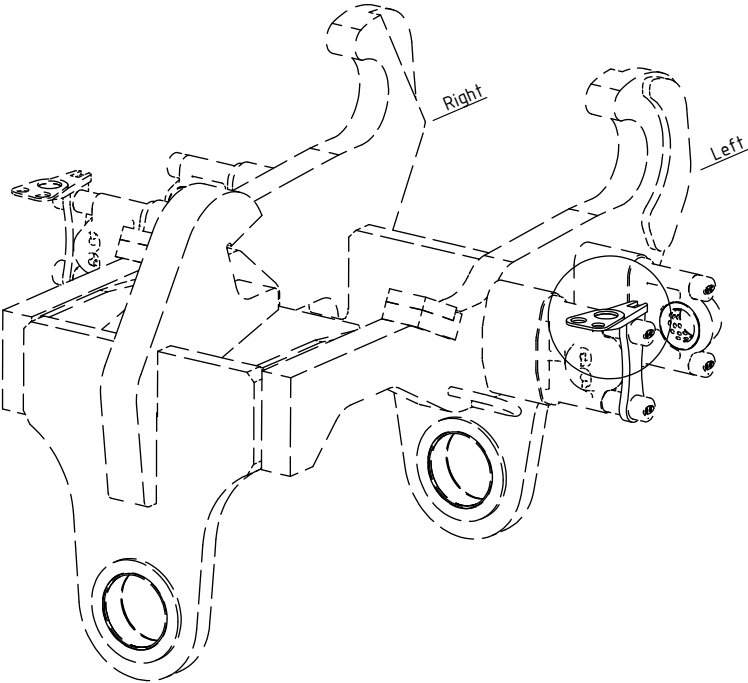

EC219 ECHF - T620V Top part

FEED
3/4" (Std)

POS	DESCRIPTION	PART	QTY	COMMENTS
	Attach feed hoses from control system			(a & b represents channels on feed block)

POS in order of assembly

