Std Valves & cables - ss10 QSM

engcon®

COVERSHEET

Planned document changes:

Breifly:

Add DC2 aggregate cable with DT, 8001201, for connecting QSC without adapter cable POS.15.
POS.2 updated to 710960.

Document changes:

Date:	Change:	Rev. after change:
2021-03-04	Layout/irrelevant.	G
2021-01-26	EC209 removed.	F
2020-11-27	Option PROP on grab/extra added.	E
2020-11-02	Photo valve connections replaced.	D
2020-08-20	EC226 ePS protection replaced.	C
2020-03-13	EC209 added.	B
2020-02-25	ePS cables replaced. Photos replaced. Spare parts added.	A
2019-08-14	New instruction.	-

Std Valves & cables - ss10 QSM

engcon®

EC214, EC219, EC226, EC233

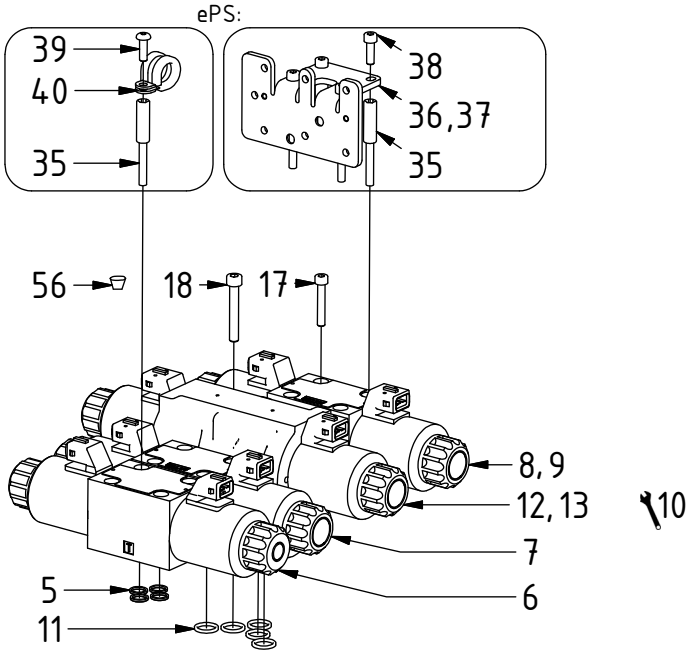

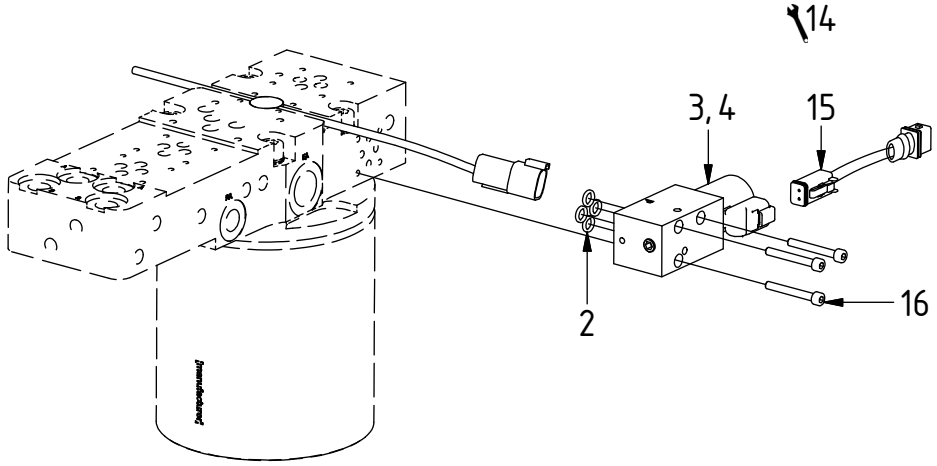

POS	DESCRIPTION	PART	QTY	COMMENTS
1	Std Valves & cables is applied alongside control system assembly			See "Control system" (hoses) (214, 219, 226, 233) QSM
2	O-ring square 7,66x1,68	7000579	4	
3	Directional valve NG4 IQS 12V DT	1042047	1	(POS.2 included)
4	Directional valve NG4 IQS 24V DT	1042190	1	(POS.2 included)
5	O-ring 9,25x1,78	710901	12	
6	Directional valve prop 12V open T	7000092	1	(POS.5 included)
7	Directional valve prop 12V	730190	1	(POS.5 included)
8	Directional valve NG6 12V	730101	1	(POS.5 included)
9	Directional valve NG6 24V	730103	1	(POS.5 included)
10	For option PROP on grab/extra			See p.15 for instruction
11	O-ring square 12,42x1,68	750704	5	
12	Directional valve NG10 12V	730340	1	(POS.11 included)
13	Directional valve NG10 24V	730339	1	(POS.11 included)
14	For connecting QSC			See p.14 (only affects DC2 assy.)
15	Adapter cable DT-JT	1017478	1	
16	MC6S M5x40 12.9	610405	3	Torque: 9,7Nm
17	MC6S M5x30 12.9	610403	12	Torque: 9,7Nm
18	MC6S M6x40 12.9	610418	4	Torque: 17Nm
35	Valve spacer ePS	1034402	5	
36	Bracket ePS	1038119	1	For Topcon/LEICA/Novatron
37	Bracket ePS (Trimble only)	1038117	1	For Trimble
38	MC6S M5x16 12.9	610401	4	Torque: 9,7Nm
39	K6S M5x16 10.9 FZB	611818	1	
40	Rubber steel clamp ø16	6000009	1	
56	Plastic plug (red) for valves	790156	12	

POS in order of assembly

Dashed lines for overview, mounts on other pages/assemblies. indicates instruction. represents hose.

Photos on page 13.

Std Valves & cables - ss10 QSM

engcon®

EC214, EC219, EC226, EC233

DC2

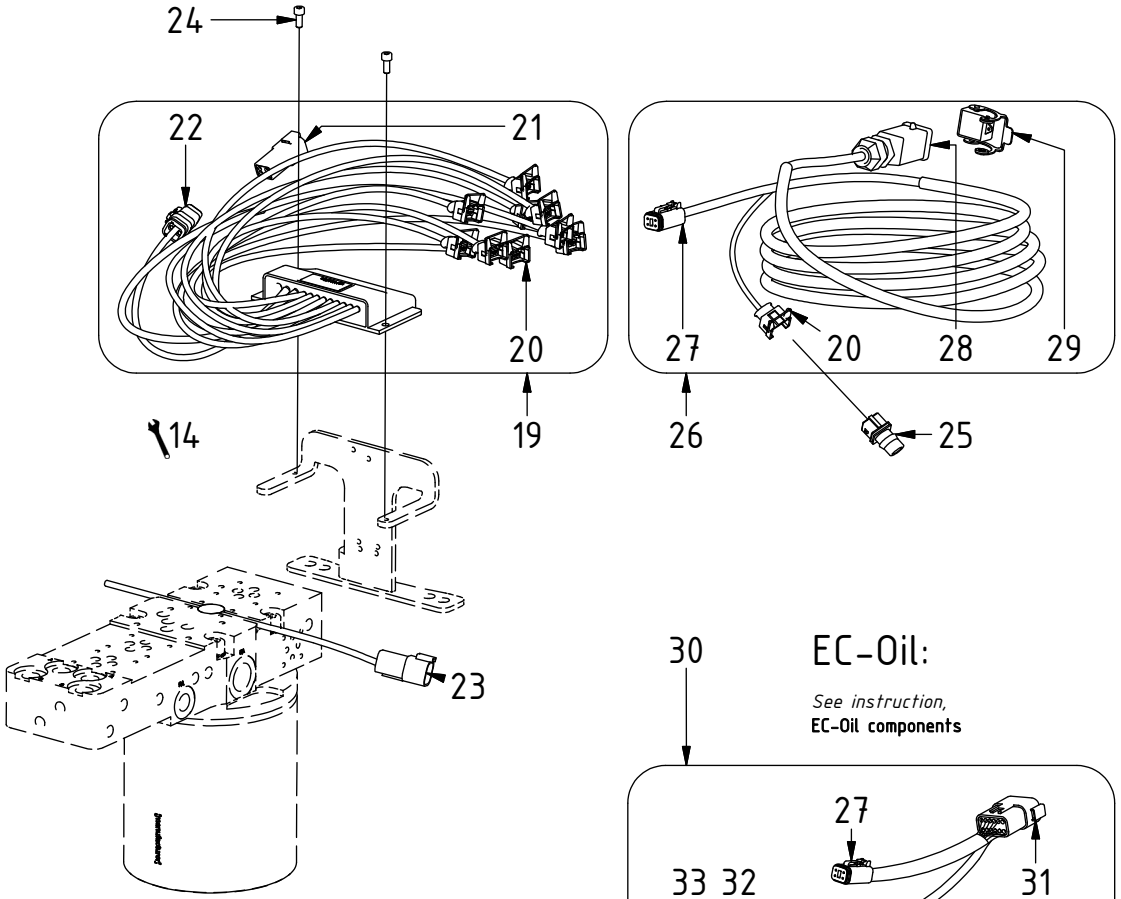

POS	DESCRIPTION	PART	QTY	COMMENTS
14	For connecting QSC			See p.14 (only affects DC2 assy.)
19	Tiltrotator module DC2 Q-Safe	842137	1	
20	Connector JT	810218	9	
21	Connector Deutsch DT04-4P	820108	1	
22	Connector Deutsch DTM06-6S	8000053	1	
23	Q-Safe connector			
24	MC6S M5x12 12.9	6000077	2	
25	Plug JT	1045154	1	Plug JT connector
26	Aggregate cable DC2 Complete QSC	8000175	1	
27	Connector Deutsch DT06-4S	820218	1	
28	ILME contact 12P DC2 Complete	841192	1	
29	ILME cover 12P contact with jumper	810208	1	
30	Adapter cable ECO W DC2 DTM	1048529	1	For EC-Oil. Replace POS.26
31	Connector Deutsch DTM04-12P	8000177	1	
32	Connector Deutsch DT06-2S	820219	1	
33	Protection plug DT	8000086	1	Plug DT connector
41	Adapter cable DC2 ePS	8000783	1	Between POS.19 & 26 / 30 for ECO
42	Adapter cable ePS rotation sensor	8000784	1	
43	Cable Tilt angle sensor ECO W DC2	1048530	1	For EC-Oil with ePS
44	Connector Deutsch DTM04-6P	8000054	1	
45	Protection ePS/MACS EC214-EC219	1033565	1	
46	Protection ePS/MACS EC233	1040940	1	
47	Protection ePS EC226 V2	1055677	1	

POS in order of assembly

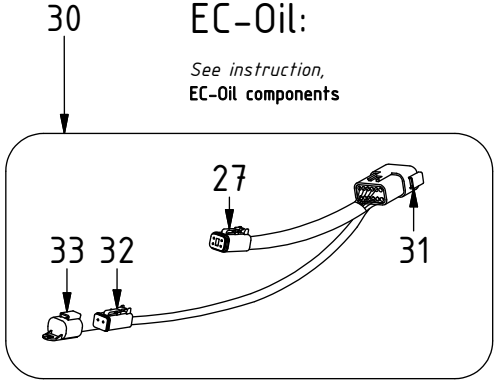

EC-Oil:

See instruction,
EC-Oil components

ePS:

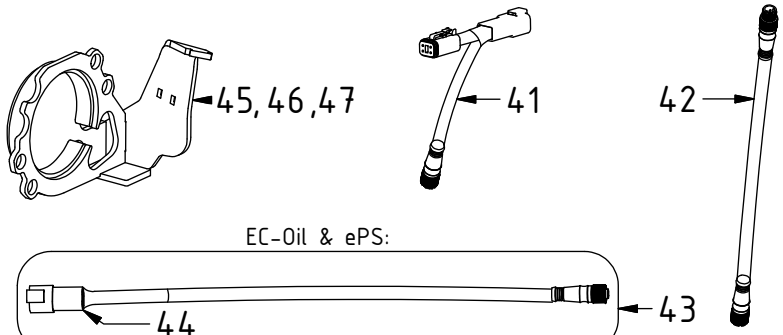

Std Valves & cables - ss10 QSM

engcon®

EC214, EC219, EC226, EC233

ss10 (SVAB)

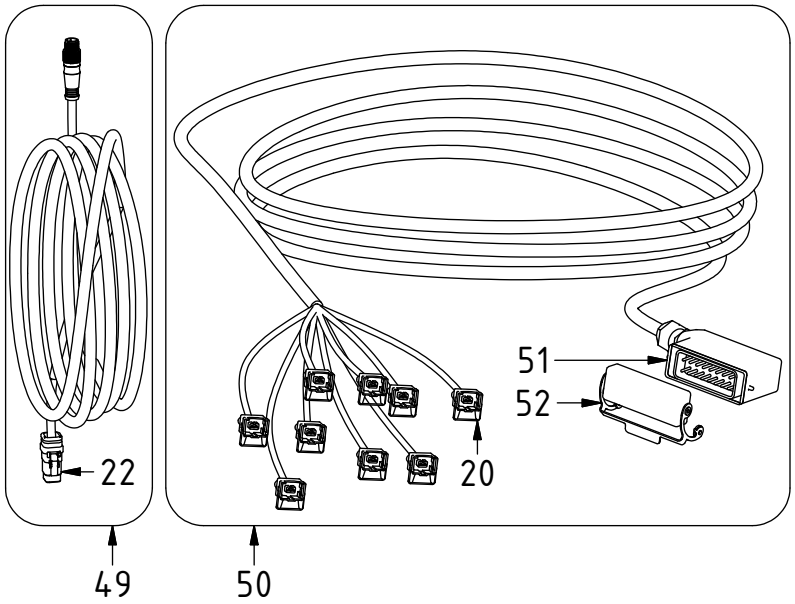

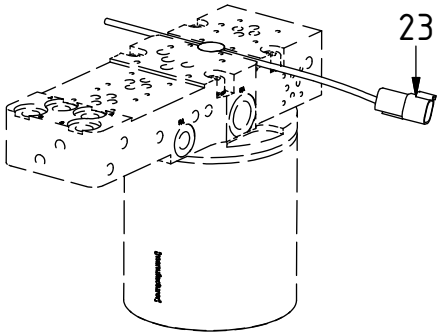

EC-Oil:

See instruction,
EC-Oil components

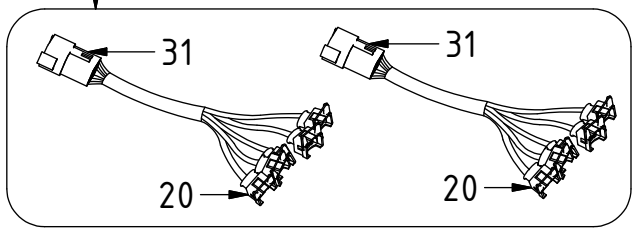

ePS:

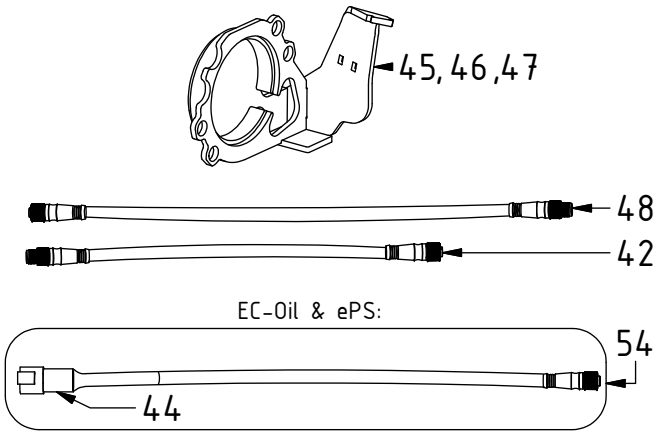

POS	DESCRIPTION	PART	QTY	COMMENTS
20	Connector JT	810218	9	
22	Connector Deutsch DTM06-6S	8000053	1	
23	Q-Safe connector			Attach to POS.49 or See EC-Oil comp.
31	Connector Deutsch DTM04-12P	8000177	1	
42	Adapter cable ePS rotation sensor	8000784	1	
44	Connector Deutsch DTM04-6P	8000054	1	
45	Protection ePS/MACS EC214-EC219	1033565	1	
46	Protection ePS/MACS EC233	1040940	1	
47	Protection ePS EC226 V2	1055677	1	
48	Ag.cable SVAB ePS w. 120 ohm ter.	8000824	1	
49	Cable QS QLM tiltrotator SVAB	842148	1	
50	Aggregate cable SVAB Complete	1015196	1	
51	ILME contact 16P Complete	810203	1	
52	ILME cover 16P contact with jumper	810235	1	
53	Adapter cable ECO (DTM) SVAB	1029599	2	For EC-Oil. Replace POS.49-50
54	Ad.cable ePS ECOW SVAB 120 ohm	8000825	1	For EC-Oil ePS. Replace POS.48

POS in order of assembly

Std Valves & cables - ss10 QSM

engcon®

EC214, EC219, EC226, EC233

DC2

Std

POS	DESCRIPTION	PART	QTY	COMMENTS
14	For connecting QSC			See p.14 (only affects DC2 assy.)
19	Tiltrotator module DC2 Q-Safe	842137	1	
23	Q-Safe connector			
25	Plug JT	1045154	1	Plug JT connector
26	Aggregate cable DC2 Complete QSC	8000175	1	
59	Cable tie 7,8x360	1021587	1	
60	Cable tie 4,8x360	1021586	1	

POS in order of assembly

Cables/connectors:

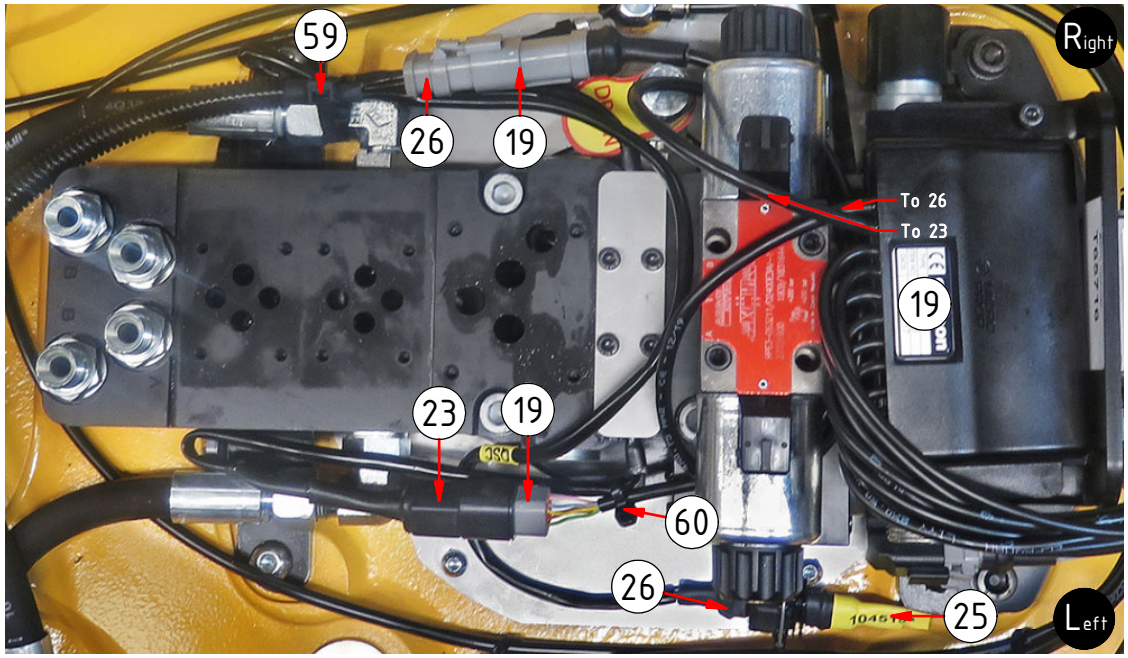

Cables left (std)

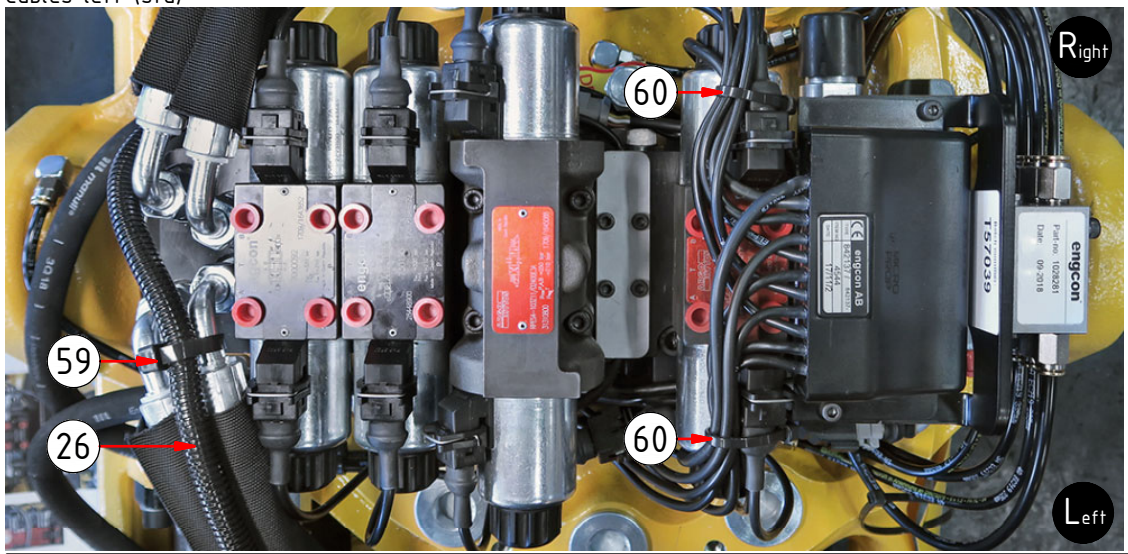

Cables right (option)

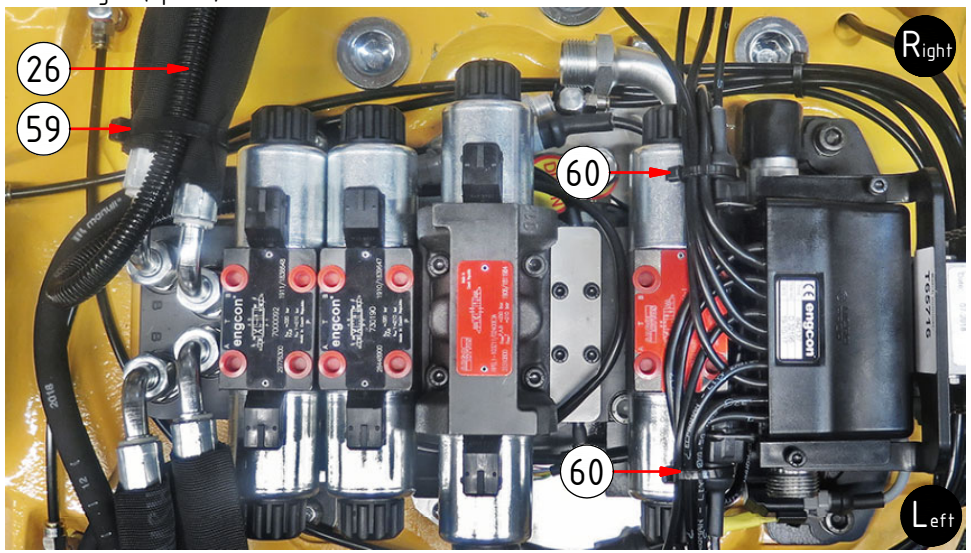

Dashed lines for overview, mounts on other pages/assemblies. indicates instruction. represents hose.

Valves/JT on page 13.

EC214, EC219, EC226, EC233

POS	DESCRIPTION	PART	QTY	COMMENTS

POS in order of assembly

See instruction,
EC-Oil components

DC2

Top EC-Oil Lubrication

Lubrication from block:

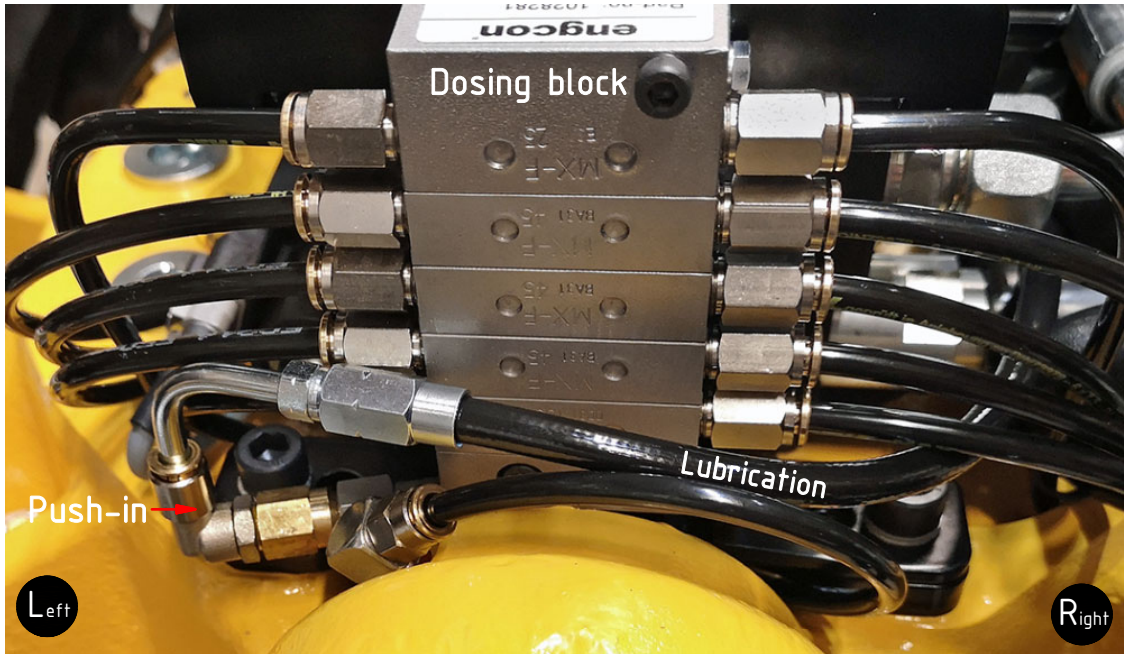

Continue to page 7 for EC-Oil cables & connectors.

Std Valves & cables - ss10 QSM

engcon®

EC214, EC219, EC226, EC233

See instruction,
EC-Oil components

DC2

Top EC-Oil

Cables/connectors:

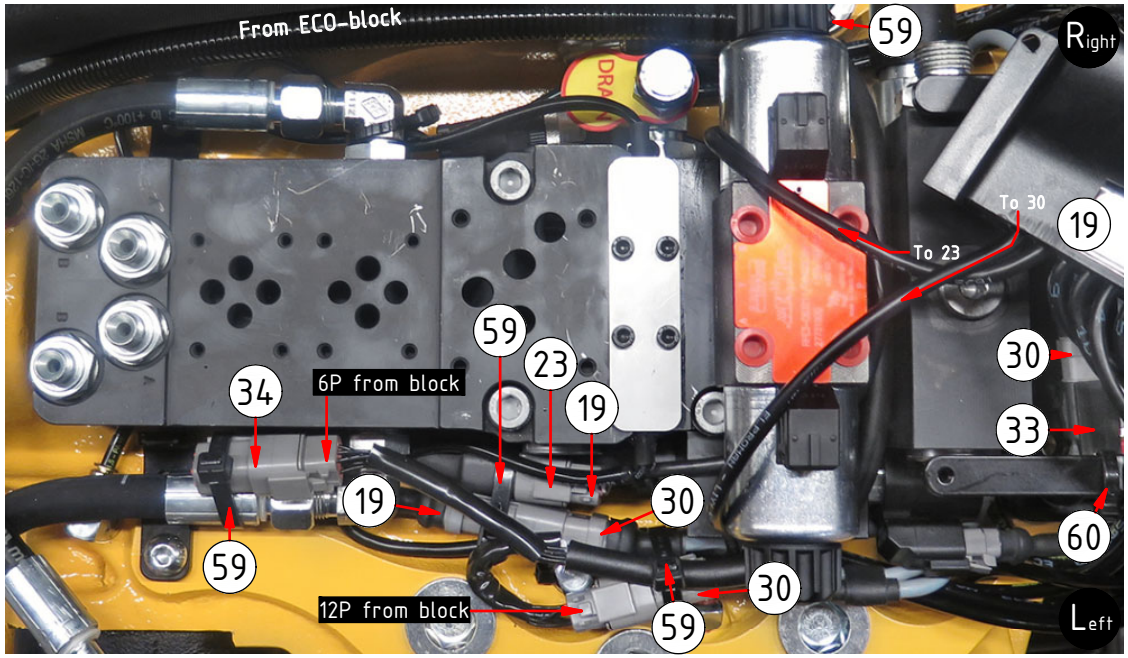

Cables:

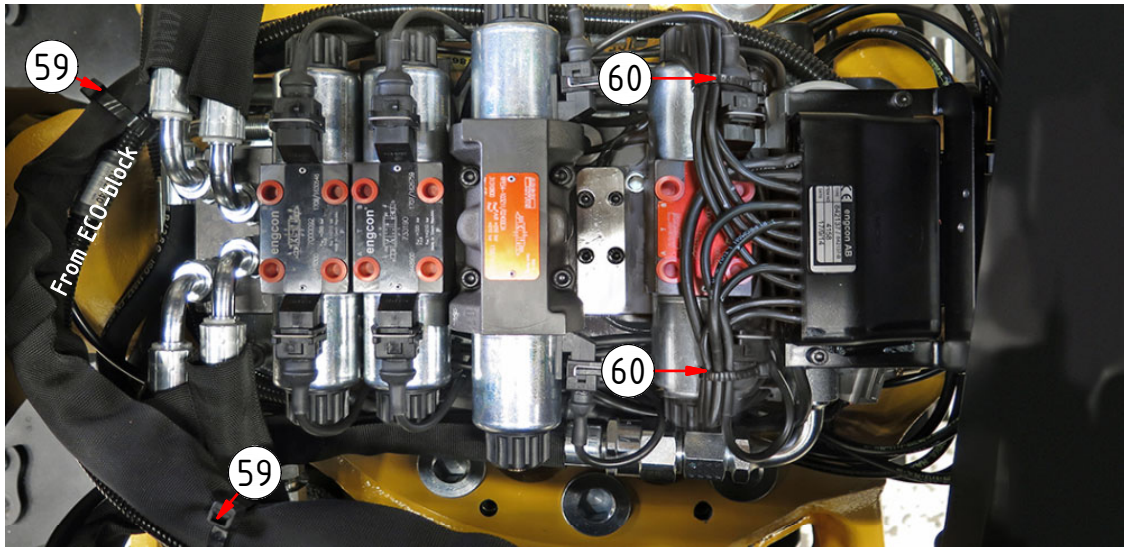

POS	DESCRIPTION	PART	QTY	COMMENTS
19	Tiltrotator module DC2 Q-Safe	842137	1	
23	Q-Safe connector			
30	Adapter cable ECO W DC2 DTM	1048529	1	For EC-Oil. Replace POS.26
33	Protection plug DT	8000086	1	Plug DT connector
34	Protection plug DTM	8000090	1	
41	Adapter cable DC2 ePS	8000783	1	Between POS.19 & 30
42	Adapter cable ePS rotation sensor	8000784	1	
43	Cable Tilt angle sensor ECO W DC2	1048530	1	For EC-Oil with ePS
59	Cable tie 7,8x360	1021587	1	
60	Cable tie 4,8x360	1021586	1	

POS in order of assembly

Top EC-Oil & ePS:

Cables/connectors:

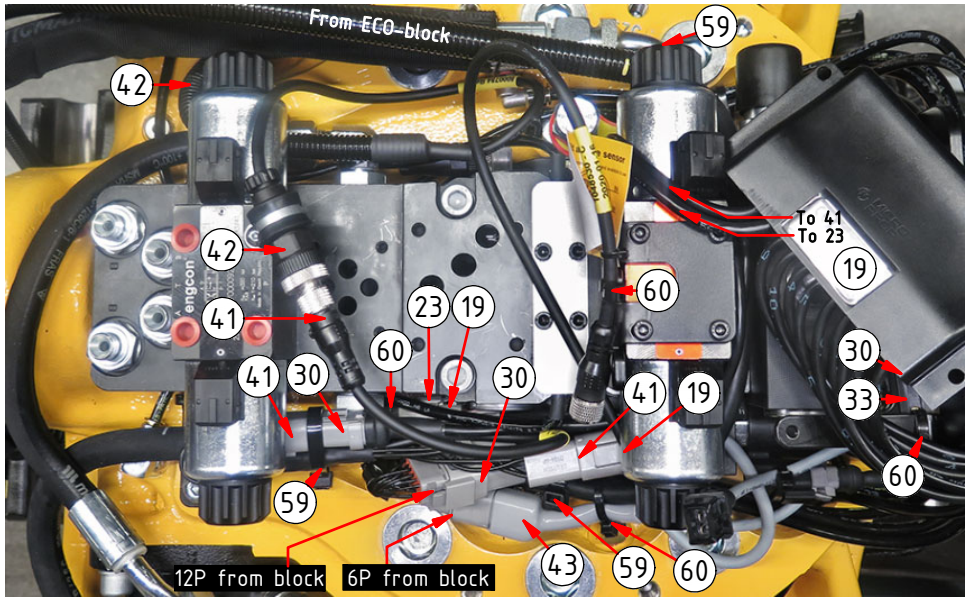

Continue to page 9 for ePS sensor connection.

Dashed lines for overview, mounts on other pages/assemblies. indicates instruction. represents hose.

Std Valves & cables - ss10 QSM

engcon®

EC214, EC219, EC226, EC233

DC2

ePS

POS	DESCRIPTION	PART	QTY	COMMENTS
19	Tiltrotator module DC2 Q-Safe	842137	1	
23	Q-Safe connector			
25	Plug JT	1045154	1	Plug JT connector
26	Aggregate cable DC2 Complete QSC	8000175	1	
41	Adapter cable DC2 ePS	8000783	1	
42	Adapter cable ePS rotation sensor	8000784	1	
59	Cable tie 7,8x360	1021587	1	
60	Cable tie 4,8x360	1021586	1	

POS in order of assembly

Cables/connectors:

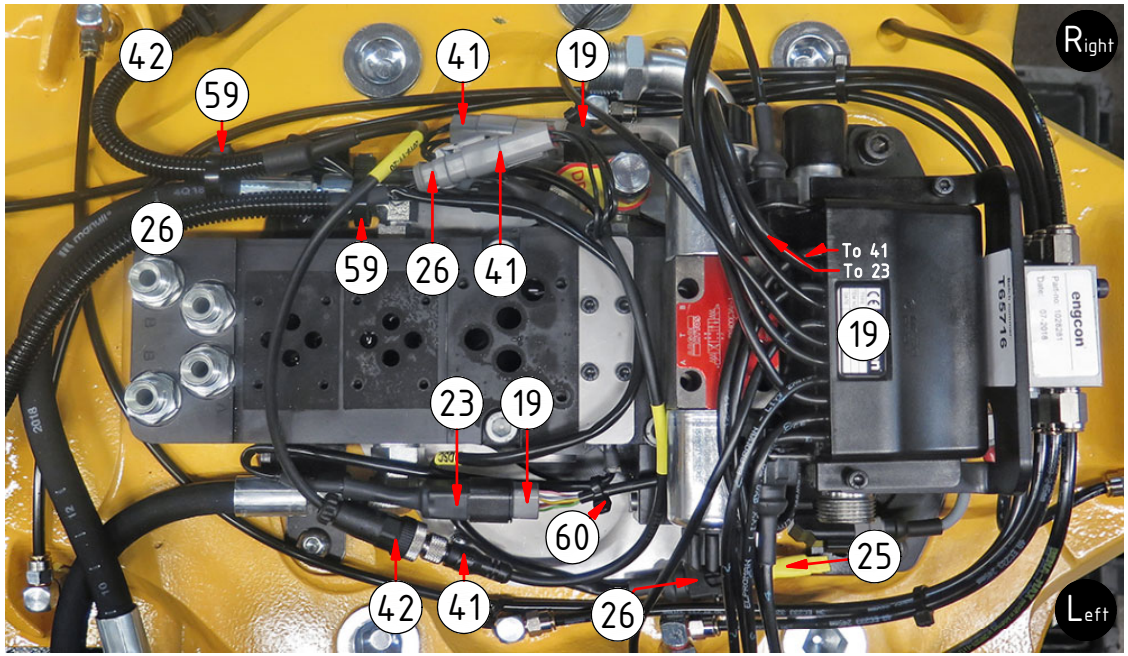

Sensor connection:

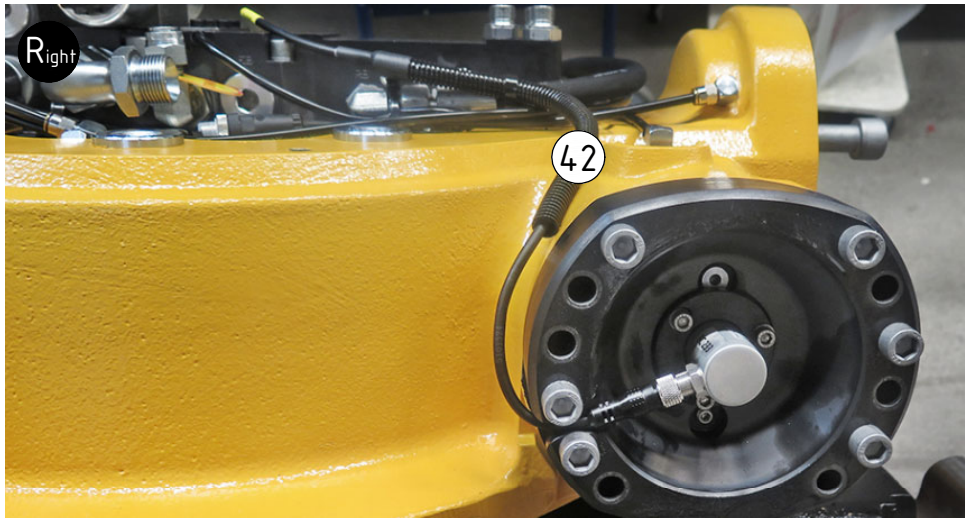

Cables left (std)

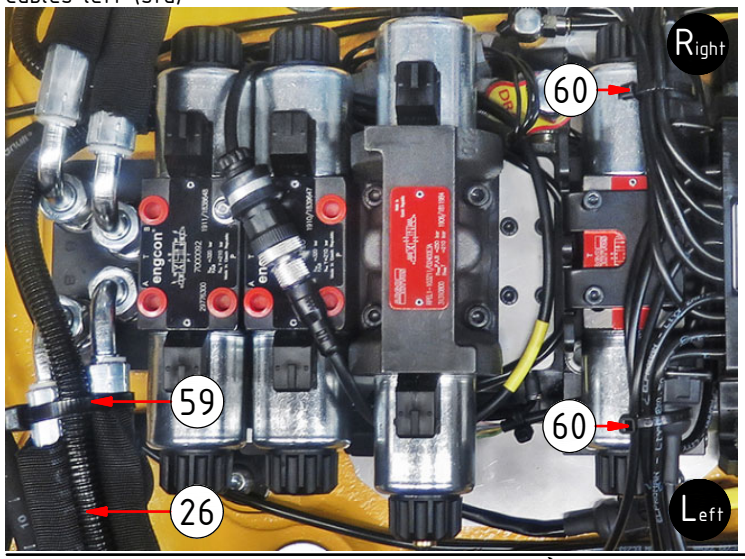

Cables right (option)

Sensor cable:

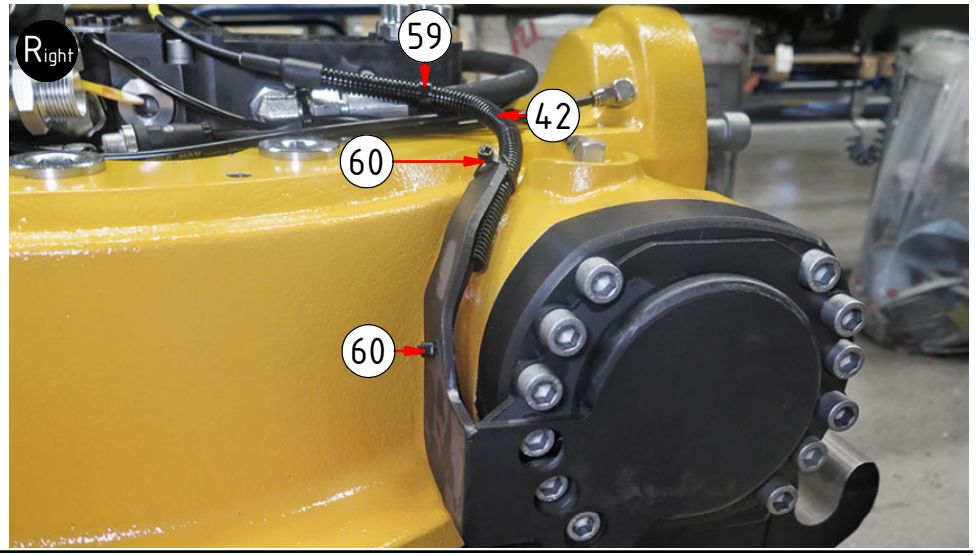

Dashed lines for overview, mounts on other pages/assemblies. indicates instruction. represents hose.

Valves/JT on page 13.

Std Valves & cables - ss10 QSM

engcon®

EC214, EC219, EC226, EC233

ss10 (SVAB)

Std

POS	DESCRIPTION	PART	QTY	COMMENTS
23	Q-Safe connector			
49	Cable QS QLM tiltrotator SVAB	842148	1	
50	Aggregate cable SVAB Complete	1015196	1	
59	Cable tie 7,8x360	1021587	1	
60	Cable tie 4,8x360	1021586	1	

POS in order of assembly

Cables/connectors:

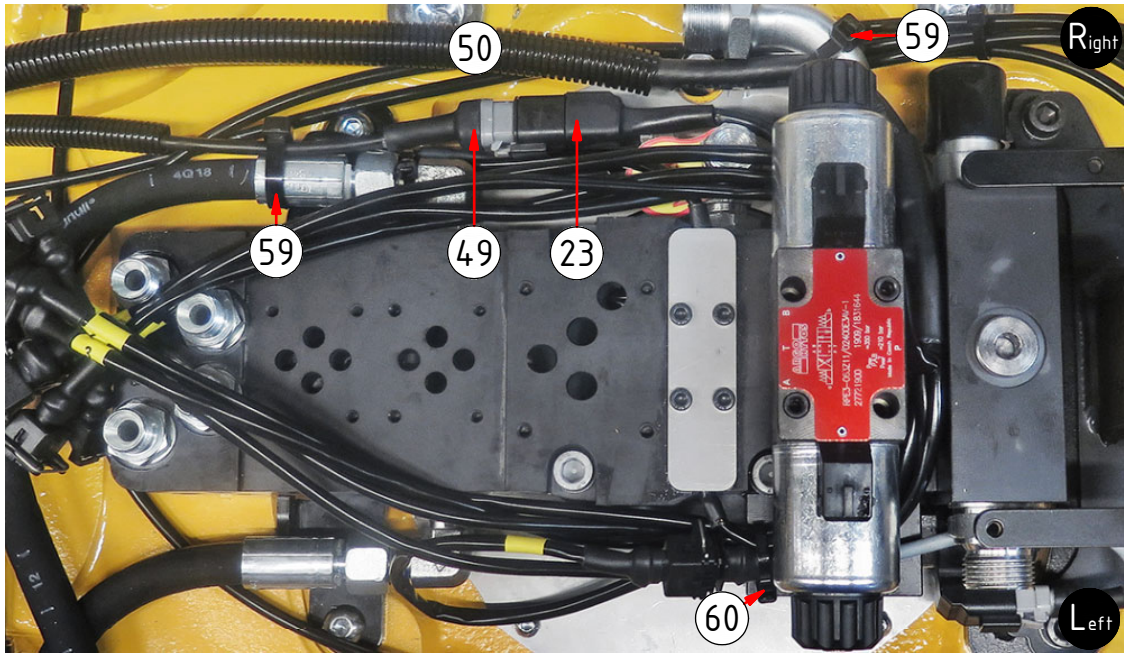

Cables left (std)

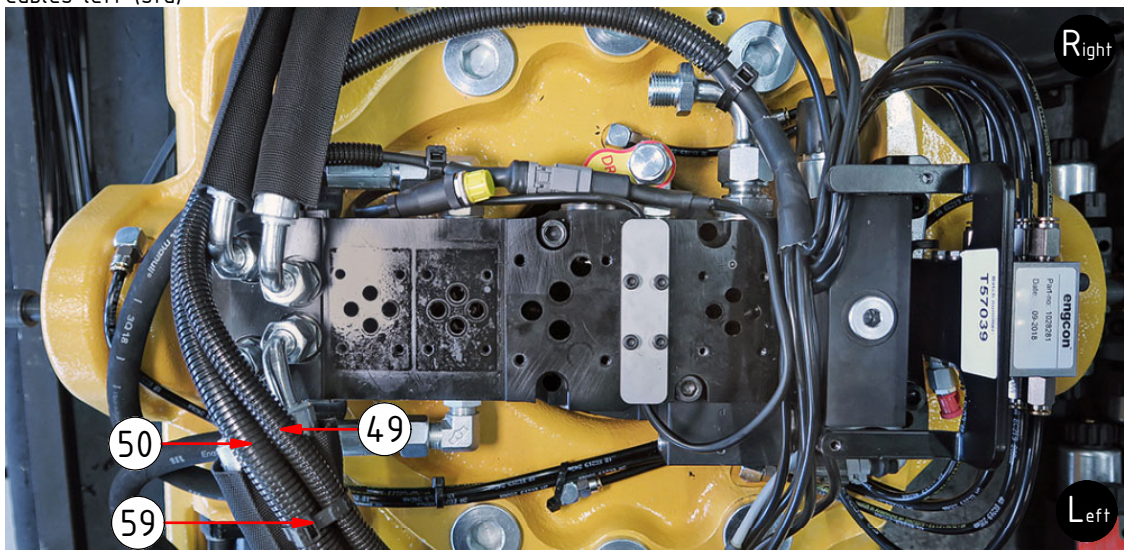

Cables right (option)

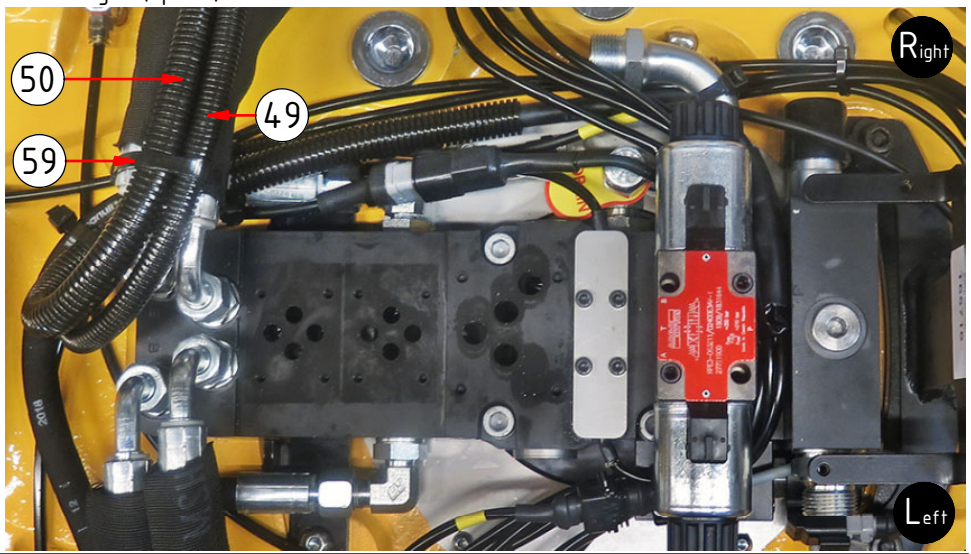

EC214, EC219, EC226, EC233

POS	DESCRIPTION	PART	QTY	COMMENTS

POS in order of assembly

See instruction,
EC-Oil components

ss10 (SVAB)

Top EC-Oil Lubrication

Lubrication from left block:

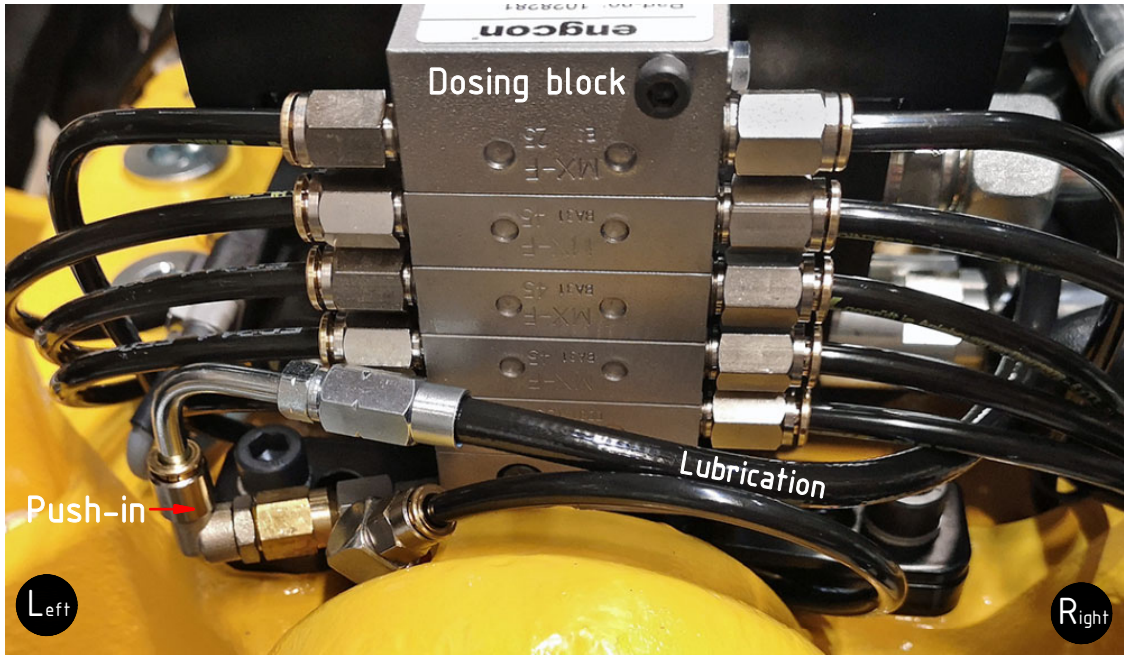

Continue to page 11 for EC-Oil cables & connectors.

Std Valves & cables - ss10 QSM

engcon®

EC214, EC219, EC226, EC233

See instruction,
EC-Oil components

ss10 (SVAB)

Top EC-Oil

POS	DESCRIPTION	PART	QTY	COMMENTS
23	Q-Safe connector			Attach to 6P from Left block
25	Plug JT	1045154	1	Plug JT connector "1" to Right
34	Protection plug DTM	8000090	1	No ePS: attach to 6P from Right block
42	Adapter cable ePS rotation sensor	8000784	1	
53	Adapter cable ECO (DTM) SVAB	1029599	2	For EC-Oil. Replace POS.49-50
54	Ad.cable ePS ECOW SVAB 120 ohm	8000825	1	For EC-Oil ePS. Replace POS.48
59	Cable tie 7,8x360	1021587	1	
60	Cable tie 4,8x360	1021586	1	

POS in order of assembly

Cables/connectors, right block:

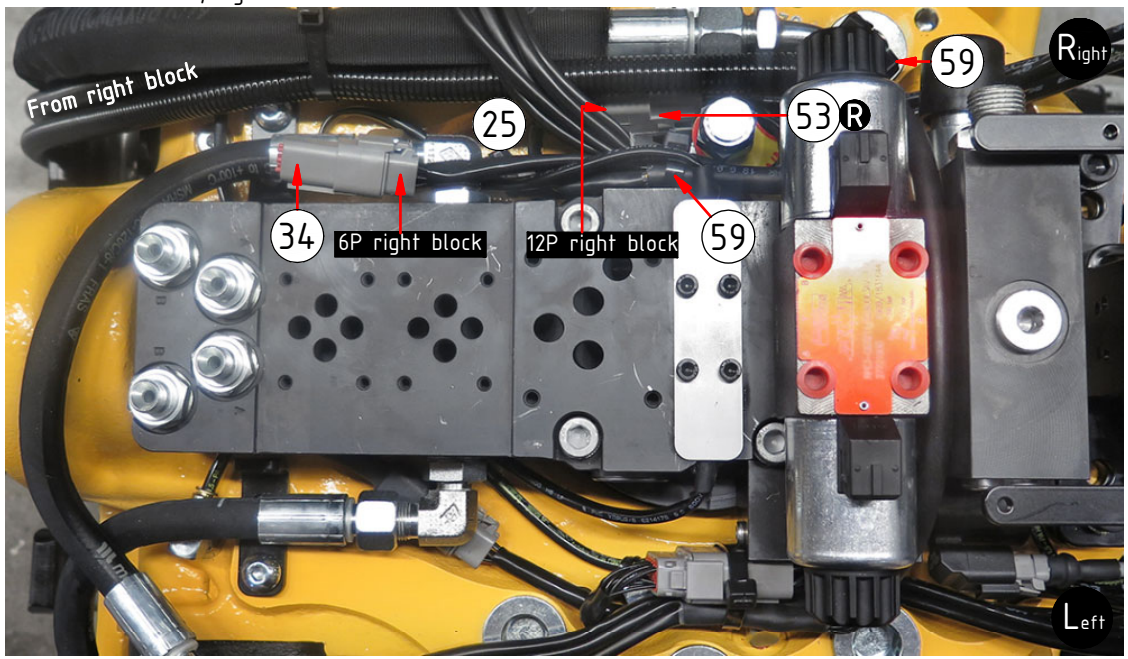

Cables/connectors, left block:

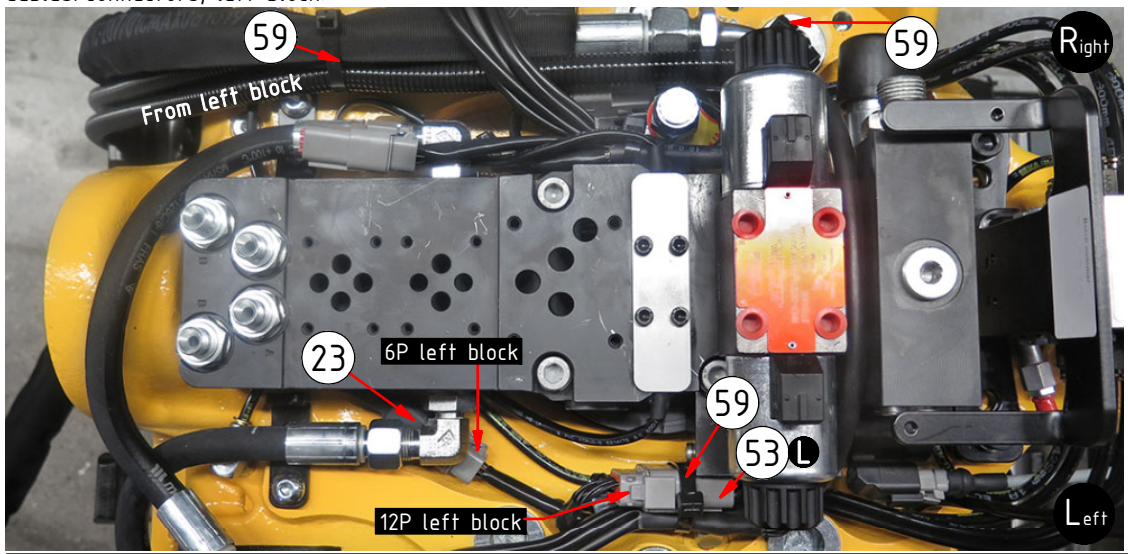

Top EC-Oil & ePS:

Cables/connectors, right block:

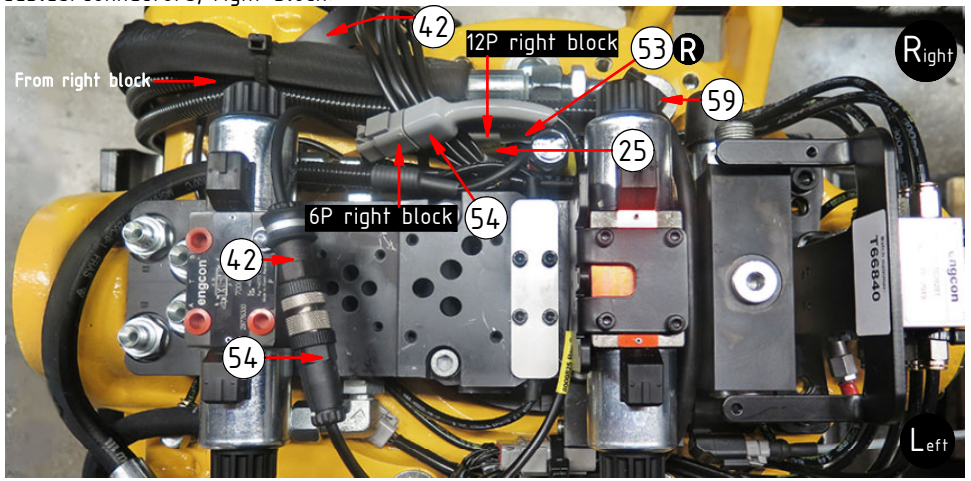

Cables/connectors, left block:

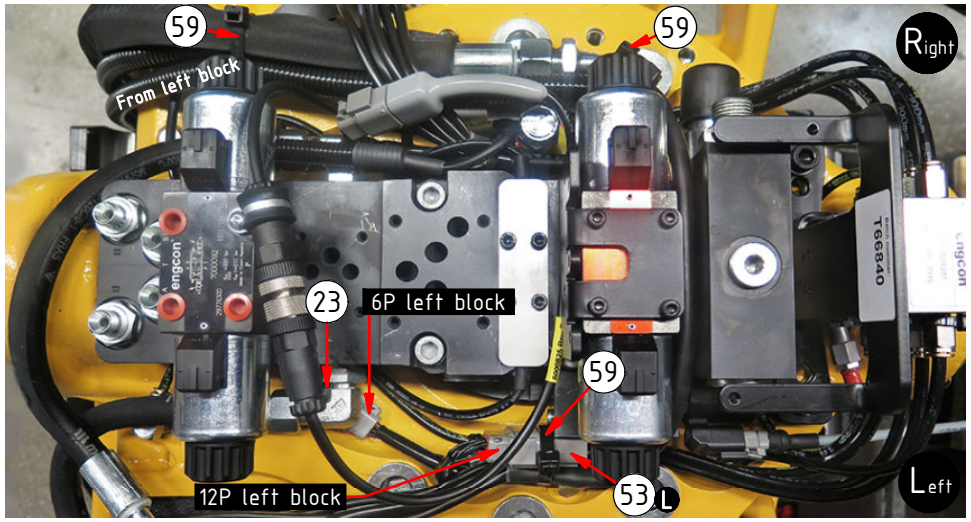

Continue to page 12 for ePS sensor connection.

Std Valves & cables - ss10 QSM

engcon®

EC214, EC219, EC226, EC233

ss10 (SVAB)

ePS

POS	DESCRIPTION	PART	QTY	COMMENTS
23	Q-Safe connector			
42	Adapter cable ePS rotation sensor	8000784	1	
48	Ag.cable SVAB ePS w. 120 ohm ter.	8000824	1	
49	Cable QS QLM tiltrotator SVAB	842148	1	
50	Aggregate cable SVAB Complete	1015196	1	
59	Cable tie 7,8x360	1021587	1	
60	Cable tie 4,8x360	1021586	1	

POS in order of assembly

Cables/connectors:

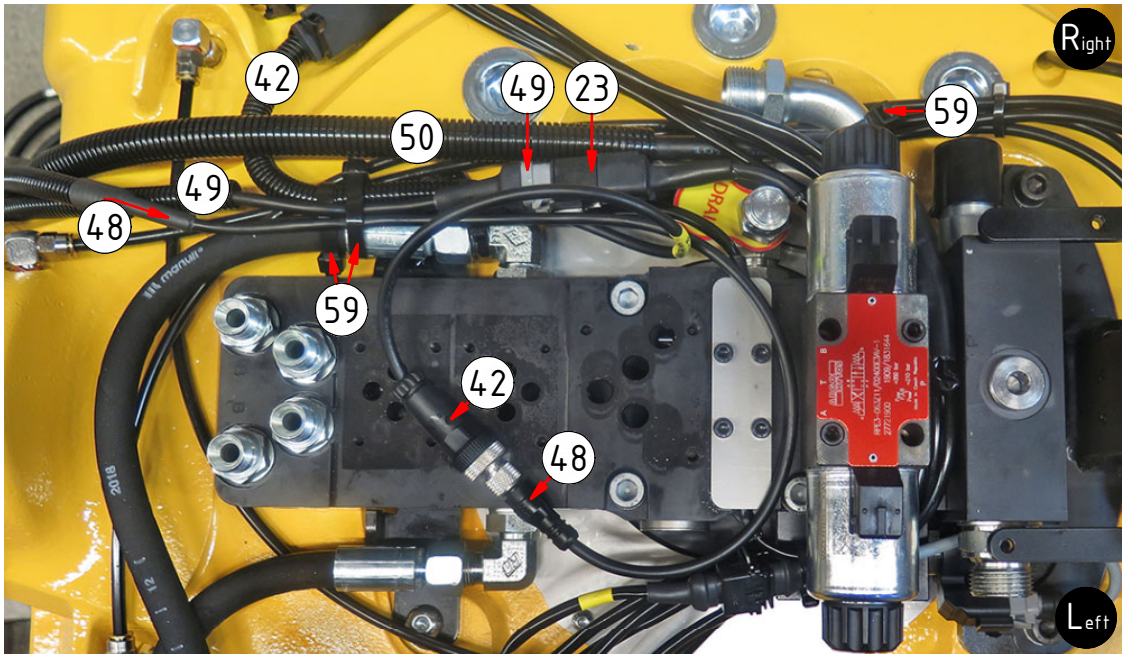

Sensor connection:

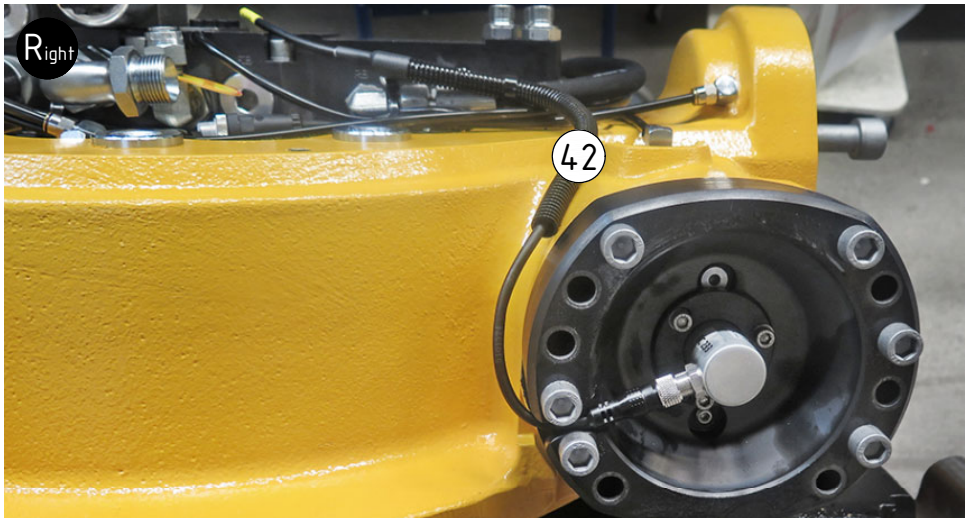

Cables left (std)

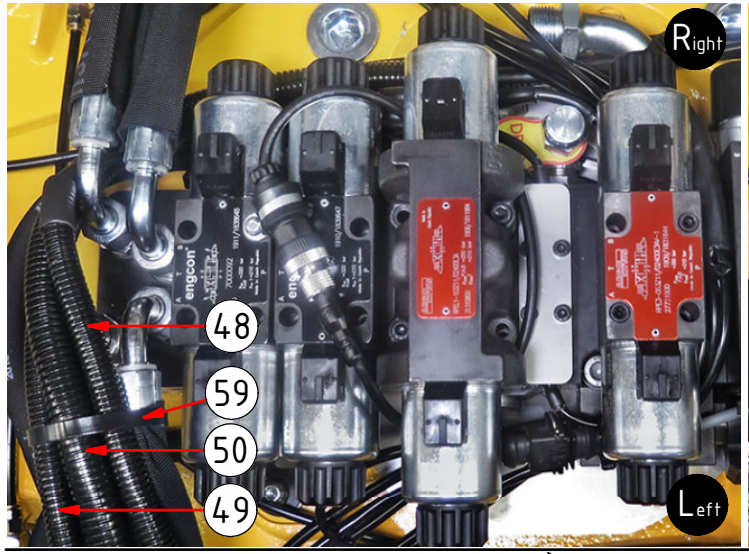

Cables right (option)

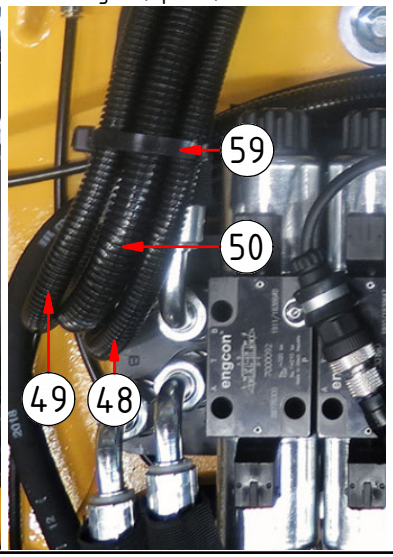

Sensor cable:

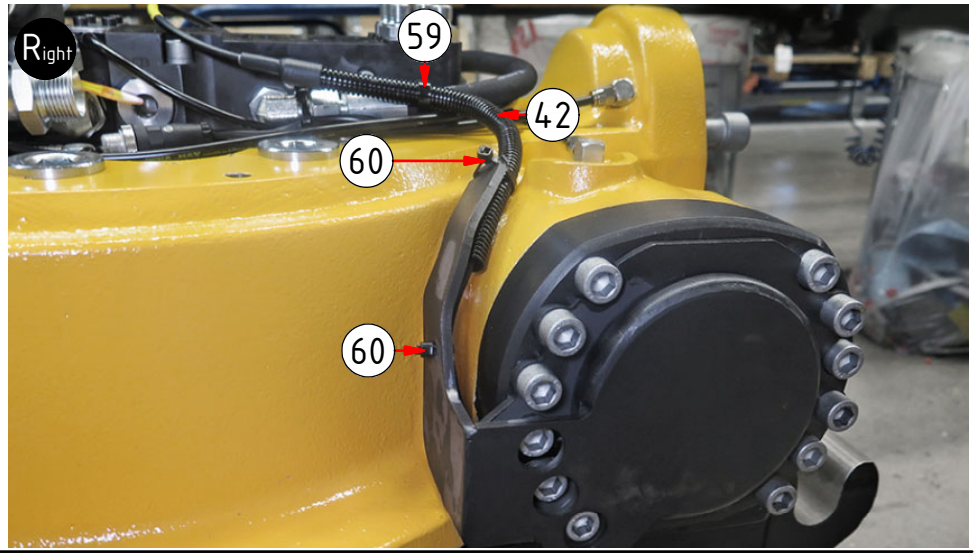

Dashed lines for overview, mounts on other pages/assemblies. indicates instruction. represents hose.

Std Valves & cables - ss10 QSM

engcon®

EC209, EC214, EC219, EC226, EC233

DC2 & ss10 (SVAB)

Valve connections

POS	DESCRIPTION	PART	QTY	COMMENTS
10	For option PROP on grab/extra			See p.15 for instruction
14	For connecting QSC			See p.14 (only affects DC2 assy.)
15	Adapter cable DT-JT	1017478	1	
56	Plastic plug (red) for valves	790156	12	

POS in order of assembly

Std, ePS, DC2 Top EC-Oil
JT marked with numbers:

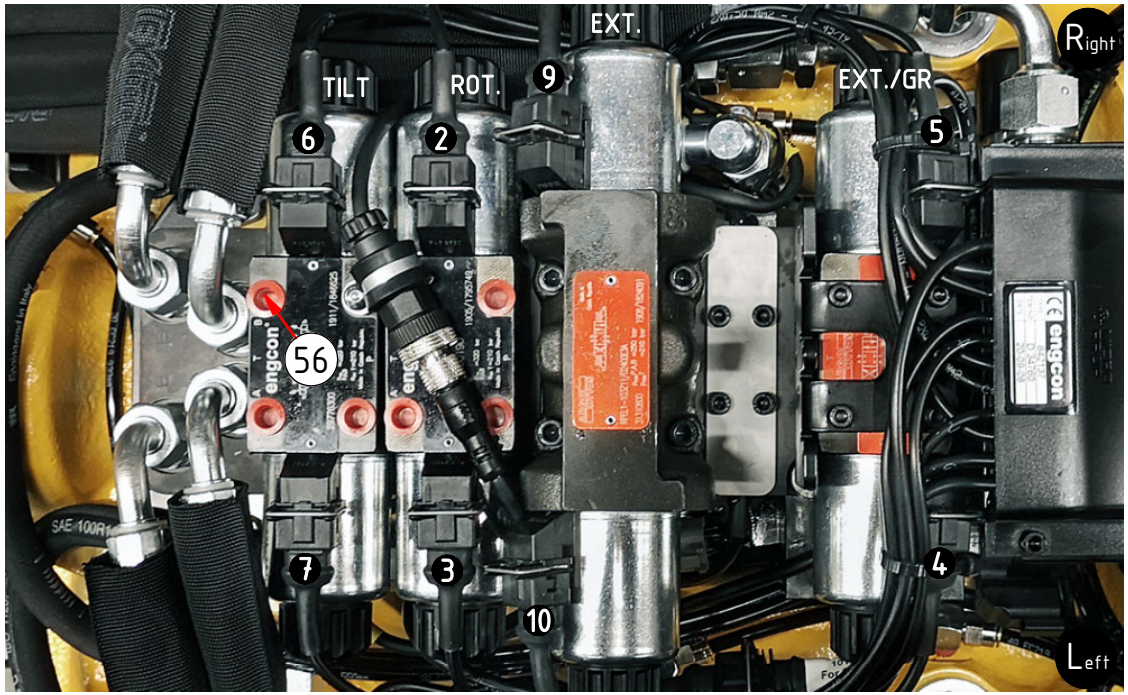

ss10 (SVAB) Top EC-Oil
JT marked with numbers:
("1" from R is not connected)

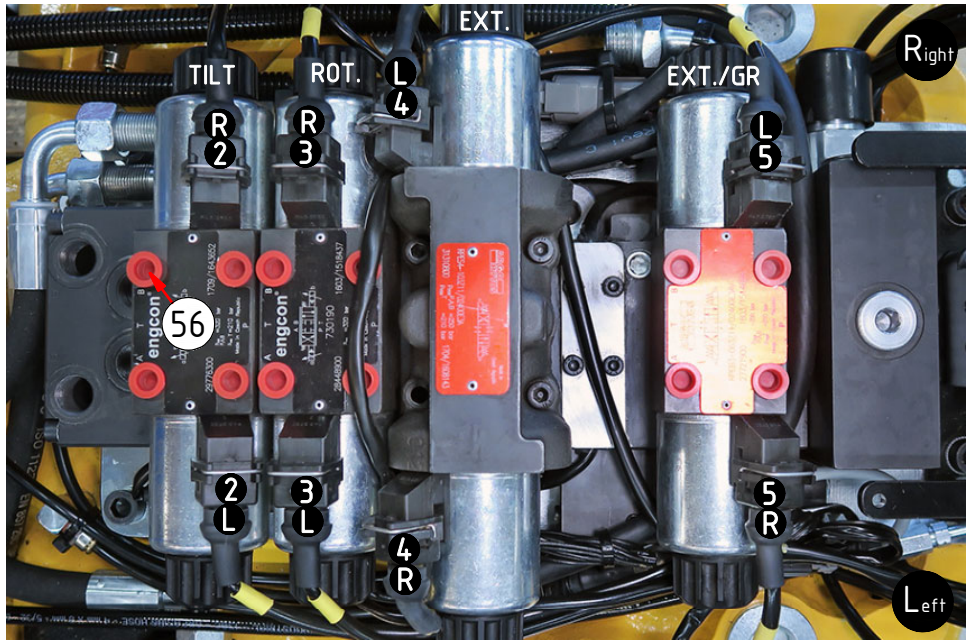

Lock valve IQS DT:

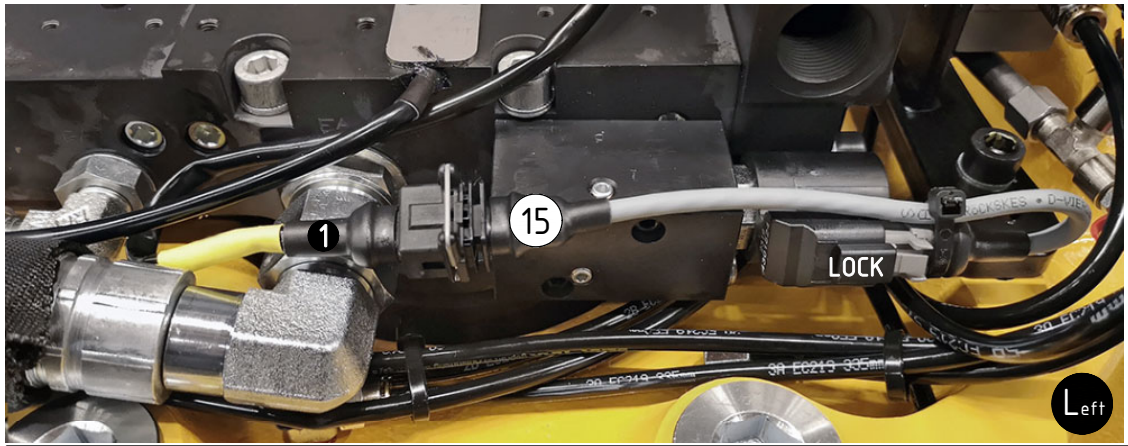

Lock valve JT:

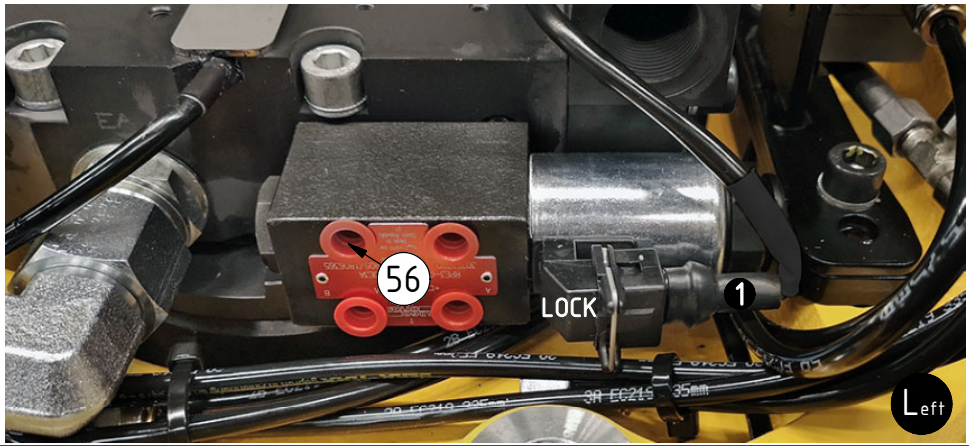

Dashed lines for overview, mounts on other pages/assemblies. indicates instruction. represents hose.

Std Valves & cables - ss10 QSM

EC214, EC219, EC226, EC233

Connecting QSC

DC2

POS	DESCRIPTION	PART	QTY	COMMENTS
15	Adapter cable DT-JT	1017478	1	
25	Plug JT	1045154	1	Plug JT connector
26	Aggregate cable DC2 Complete QSC	8000175	1	
30	Adapter cable ECO W DC2 DTM	1048529	1	For EC-Oil. Replace POS.26
33	Protection plug DT	8000086	1	Plug DT connector
55	Jumper JT QSC connected	1018662	1	Plug JT "1" when QSC is connected

POS in order of assembly

Lock valve IQS DT:

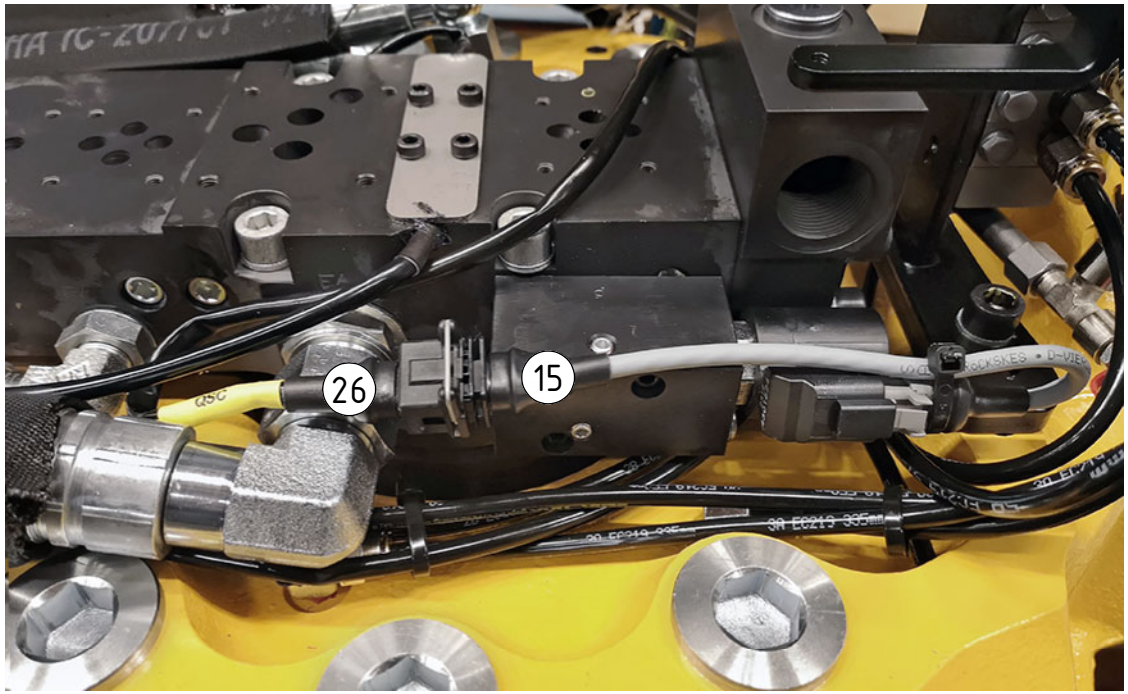

Jumper POS.55 on JT "1". POS.25 removed.

Lock valve JT:

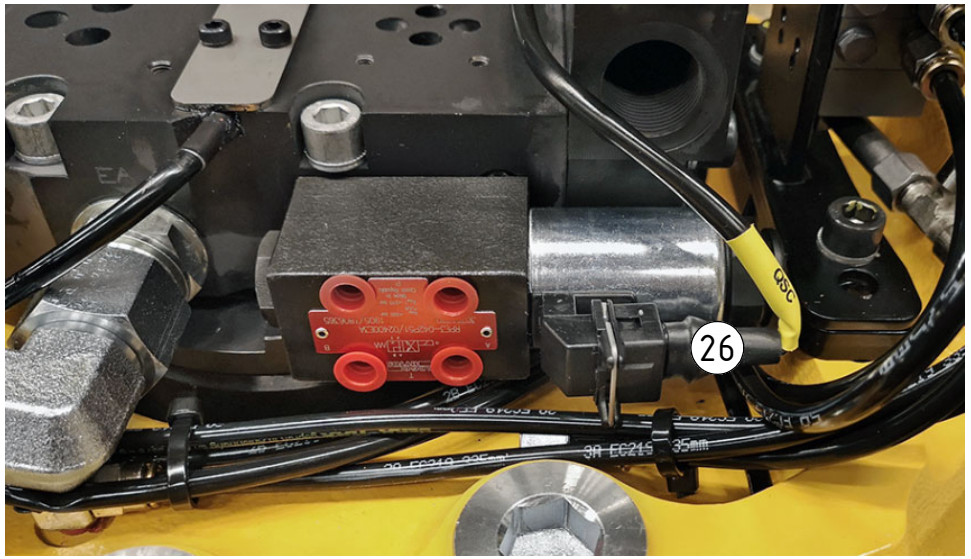

Jumper POS.55 on JT "1". POS.25 removed.

Top EC-Oil
Lock valve IQS DT:

Jumper POS.55 on JT "1". POS.33 removed. POS.15 removed.

Dashed lines for overview, mounts on other pages/assemblies. indicates instruction. represents hose.

Std Valves & cables - ss10 QSM

engcon®

special / options

PROP valve on grab/extra:

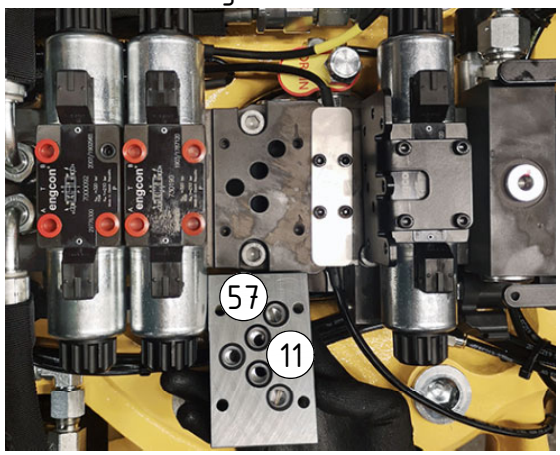

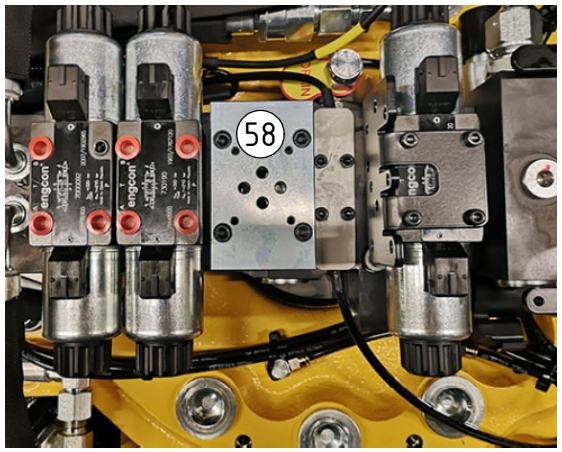

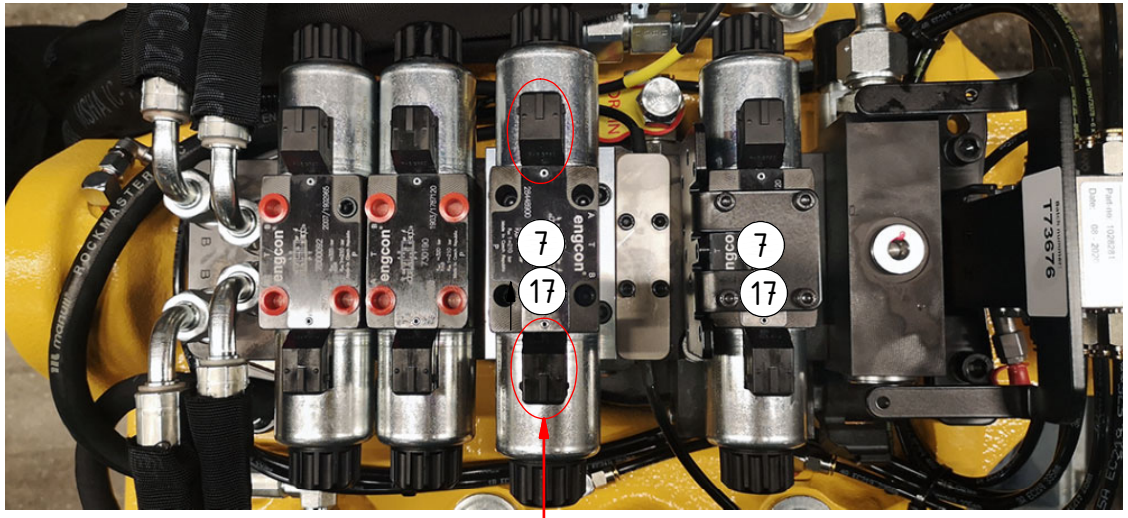

NB! Connectors for valves as standard config. *except* the connectors on EXTRA switches place as encirkled.

POS	DESCRIPTION	PART	QTY	COMMENTS
7	Directional valve prop 12V	730190	1	(POS.5 included)
11	O-ring square 12,42x1,68	750704	5	
17	MC6S M5x30 12.9	610403	12	Torque: 9,7Nm
57	Adapter plate NG10-NG6	7000147	1	
58	Screw MC6S 6x25	6000083	4	Torque: 17Nm

POS in order of assembly

Std Valves & cables - ss10 QSM

engcon®

Related spare parts

EC226 ePS:

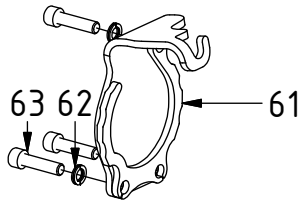

DC2 ePS:

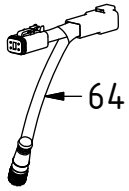

ss10 (SVAB) ePS:

ss10 (SVAB) EC-Oil ePS:



POS	DESCRIPTION	PART	QTY	COMMENTS
41	Adapter cable DC2 ePS	8000783	1	
42	Adapter cable ePS rotation sensor	8000784	1	
47	Protection ePS EC226 V2	1055677	1	
48	Ag.cable SVAB ePS w. 120 ohm ter.	8000824	1	
54	Ad.cable ePS ECOW SVAB 120 ohm	8000825	1	For EC-Oil ePS. Replace POS.48
61	Protection ePS/MACS EC226	1016554	1	Replaced by POS.47 from 2020-07
62	Washer NL10	611041	3	
63	MC6S M10x40 12.9	610453	3	
64	Adapter cable DC2 ePS DT DT M12	842173	1	Replaced by POS.41 from 2019-10
65	Adap. cable SVAB ePS rot. sensor	842188	1	Replaced by POS.42 from 2019-10
66	Agg. cable SVAB ePS rot. sensor	842187	1	Replaced by POS.48 from 2019-10
67	Adapter cable ePS ECO W SVAB	1042245	1	Replaced by POS.54 from 2019-10

POS in order of assembly