

# Break support COVERSHEET

## Planned document changes:

### Briefly:

2026-02-18. Add EC314 to subheading. (Already included in values etc. in the document).

## Document changes:

Date:	Change:	Rev. after change:
2025-10-16	EC326, EC333 added.	B
2025-08-15	EC309 added.	A
2024-02-07	New document.	-

### Readers note:

 Indicates instruction.


 Represents Hose.

Dashed lines for overview, mounts  
on other pages/assemblies.

# Break support

EC309, EC319, EC326, EC333

POS	DESCRIPTION	PART	QTY	COMMENTS
1	Shim breaksupport 0,1mm EC309-EC319	1055262	1	Use as required
2	Shim breaksupport 0,3mm EC309-EC319	1055260	1	Use as required
3	Supporting Plate EC309-EC319	1055258	1	
4	Washer NL 6mm	611039	2	
5	Screw MC6S M6x16 12.9 ZFSLH 309-319	6000017	2	
6	Shim breaksupport 0,1mm EC326-333	1023344	1	Use as required
7	Shim breaksupport 0,3mm EC326-333	1023447	1	Use as required
8	Supporting plate EC326-333	1023292	1	
9	Washer NL 8mm EC326-333	611040	2	
10	Screw MC6S M8x20 12.9 ZFSLH 326-333	6000157	2	
11	Check break play: Assembly: Rotator frame upside down Testing: Tiltrotator placed on floor			EC309-EC319: 0,5-0,7mm EC326: 0,6-0,8mm EC333: 0,8-1,0mm

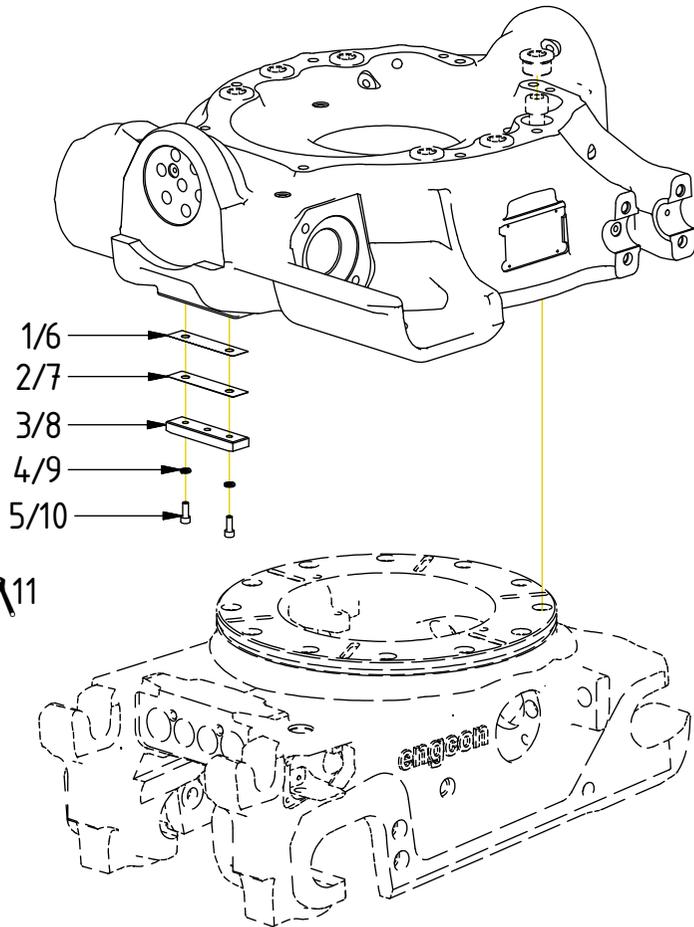

POS in order of assembly

# Break support

POS	DESCRIPTION	PART	QTY	COMMENTS
11	Check break play: Assembly: Rotator frame upside down Testing: Tiltrotator placed on floor			EC309-EC319: 0,5-0,7mm EC326: 0,6-0,8mm EC333: 0,8-1,0mm

