

Break support COVERSHEET

Planned document changes:

Briefly:

No planned changes.

Document changes:

Date:	Change:	Rev. after change:
2026-02-20	New document.	-

Readers note:

 Indicates instruction.

 Represents Hose.


Dashed lines for overview, mounts
on other pages/assemblies.

Break support

EC104, EC106

POS	DESCRIPTION	PART	QTY	COMMENTS
1	Shim breaksupport 0,1mm EC204B	1076792	2	Use as required
2	Shim breaksupport 0,3mm EC204B	1076793	2	Use as required
3	Supporting plate EC204B	1076498	1	
4	Shim breaksupport 0,1mm EC206B	1068369	2	Use as required
5	Shim breaksupport 0,3mm EC206B	1068368	2	Use as required
6	Supporting plate EC206B	1068059	1	
7	Washer NL 6mm	611039	2	
8	Screw MC6S M6x16 12.9 ZFSHL	6000017	2	
9	Check break play: Assembly: Rotator frame upside down Testing: Tiltrotator placed on floor			EC104-EC106: 0,5-0,7mm

POS in order of assembly

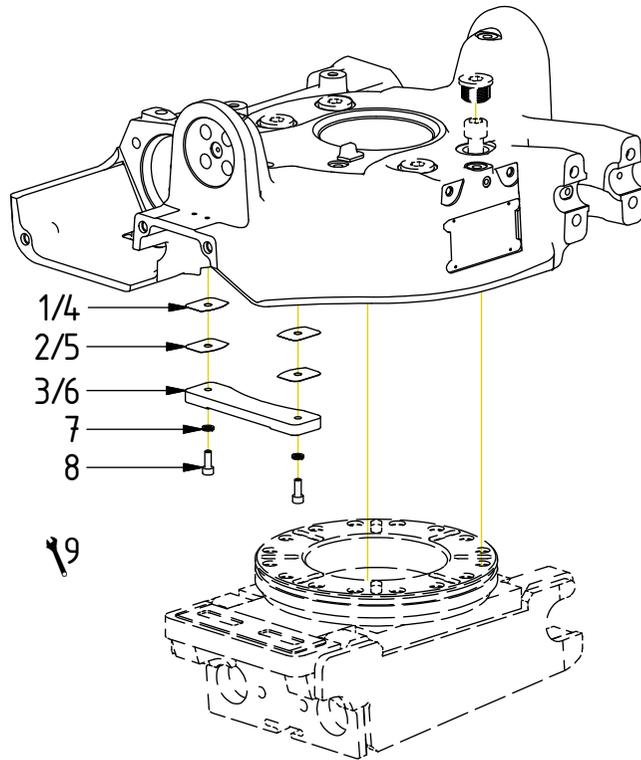

Break support

POS	DESCRIPTION	PART	QTY	COMMENTS
9	Check break play: Assembly: Rotator frame upside down Testing: Tiltrotator placed on floor			EC104-EC106: 0,5-0,7mm

